

Kandilli Study Desk L255

Assembly Guide



DİKKAT !

Değerli Müşterimiz,
Satın almış olduğunuz ürünü eksiksiz ve kolayca kurabilmeniz için hazırlamış olduğumuz klavuzu dikkatlice ve sırasıyla uygulamanızı öneririz.

Öncelikle teslim aldığınız paketi açıp, parça ve aksesuar listesinden inceleyerek gelen parçaları kontrol ediniz.

Kontrol işlemini gerçekleştirdikten sonra adımları sırasıyla, verilen aksesuarları kullanarak yapınız.

Montaj aşamasında herhangi bir problem yaşamamanız açısından aksesuar listesindeki malzeme miktarları gereğinden fazla gönderilmiştir. Malzeme artması durumunda eksik birleşim yapma endişesi duymayınız.

Sizlere verdiğimiz hizmeti özenerek ve dikkatle yapmaktayız fakat herhangi bir sorun durumunda bize ulaşabilirsiniz.

ATTENTION!

Dear customer,
We recommend that you follow the carefully prepared field guide so that you can assemble the product you have purchased completely and easily.

First of all, check the incoming parts by opening the package you received, examining the parts and accessories list.










After performing the control process, perform the steps one by one using the accessories provided.

In order to avoid any problems during the assembly phase, the amount of material in the accessory list has been sent more than necessary. Do not worry about missing joints in case of increased material.















We work with care, but if there is any problem, you can call.

KURULUM KLAVUZU (Kandilli Çalışma Masası Model Kurulumu L255)

AKSESUAR LİSTESİ


Qfix Vidası x 56  21 No'lu Vidá	Qfix Bağlantı Aparatı x 56  22 No'lu Aparat	3,5 x 18 Vida x 20  9 No'lu Vidá	3,5 x 50 Vida x 4  26 No'lu Vidá	Mentşe (Süper Deve) x 4  8 No'lu Mentşe
Arkahlk Çivisi x 40  2 No'lu Çivi	Topuz Kulp x 4  19 No'lu Kulp	Kulp Vidası x 4  7 No'lu Vidá	3,5 x 30 Vida x 12  16 No'lu Vidá	

PARÇA LİSTESİ

Alt-Üst Panel 35x35 cm P1,P7,P10,P14 x 4 	Sağ-Sol Panel 35x140.4 cm P2,P6 x 2 	Raf Panel 35x31.4 cm P3,P4,P5,P12 x 4 	Arkalık 33x142 cm P8 x 1 	Kapak 30.7x32.4 cm P9,P29 x 2 
Sağ-Sol Panel 35x68.4 cm P11,P13 x 2 	Arkalık 33x70 cm P15 x 1 	Sağ-Sol Panel (Masa) 60x70.2 cm P16,P18 x 2 	Üst Panel (Masa) 60x135 cm P17 x 1 	Arka Panel (Masa) 30x131.4 cm P32 x 1 
Çekmece Yan Panel 30x13.6 cm P21,P22,P30,P31 x 4 	Çekmece Arka Panel 25.3x13.6 cm P20,P24 x 2 	Çekmece Altlık 28.9x30 cm P27,P28 x 2 	Çekmece Kapak 30.7x16.9 cm P33,P34 x 4 	

KURULUM ŞEMASI


1

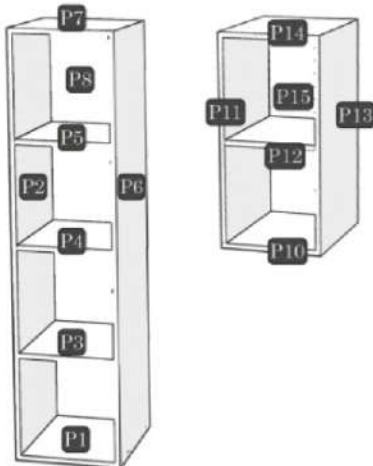

- ! Mount parts P1, P2, P3, P4, P5, P6, and P7 respectively with screw number 21 as shown in the figure. Mount part P8 from the back with nail number 2. Combine parts P10, P11, P12, P13, P14 with screw no. 21 and assemble part P15 from the back with nail no. 2.




2

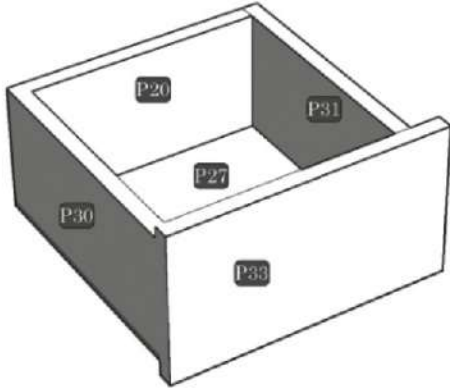

Assemble parts P20, P30, P31, P33 respectively with screw number 21 as shown in the figure. Mount the P27 base from the bottom with nail number 2. Mount the drawer handle with screw number 7 and follow the same procedure for the other drawer.




3

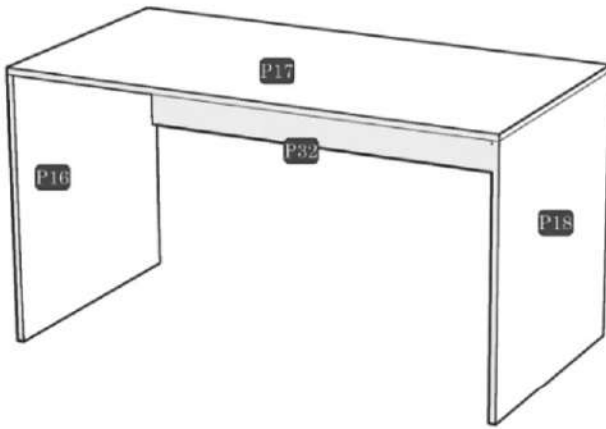

Assemble parts P16, P17, P18 together with screw number 21. Mount the P32 part to the table from the sides with screw number 26.



4

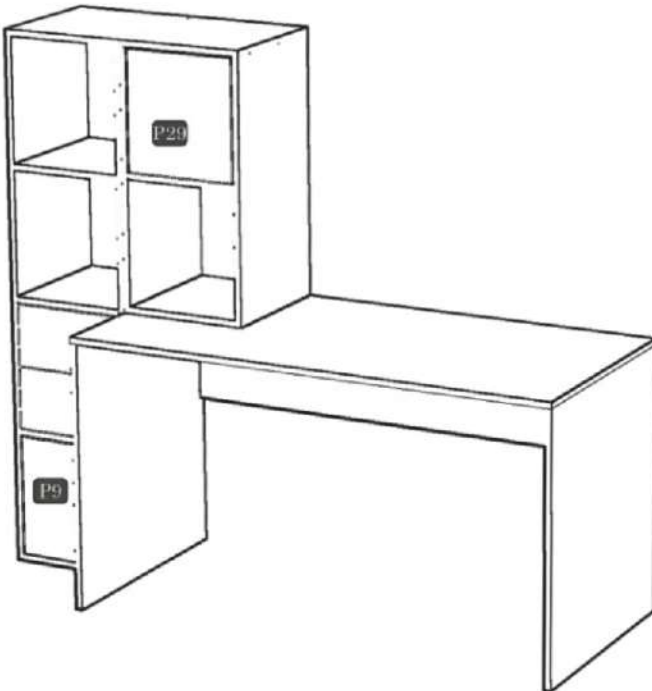

Mount the covers P9 and P29 to the cabinet using the hinge number 8 and the screw number 9. Use screw number 16 to fix the separately combined cabinets and the table together.

