

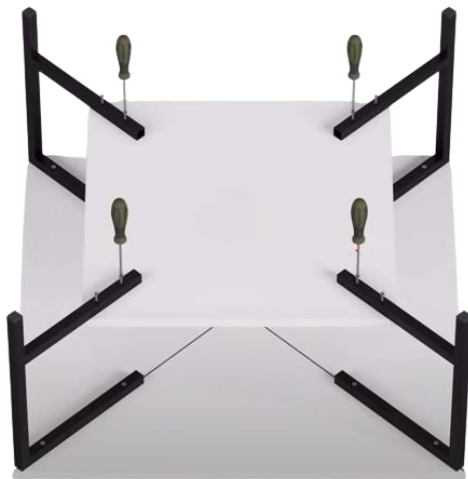
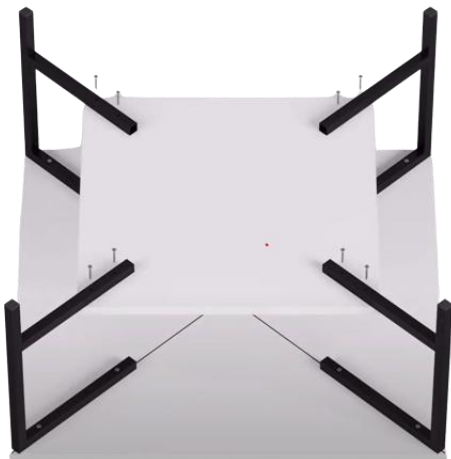
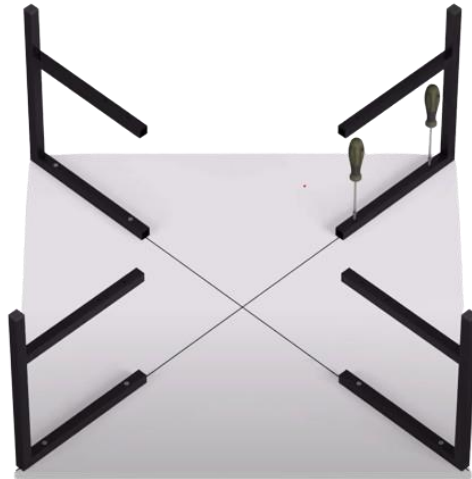
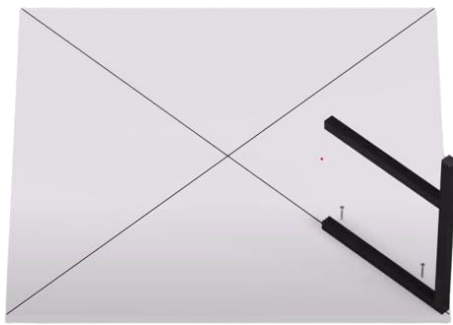


Assembly Guide

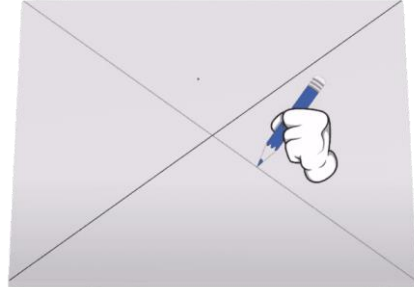

Black Line - Tv Unit Assembly Guide

1 - Turn the TV unit top plate upside down and install the minifix and dowels into the gaps.

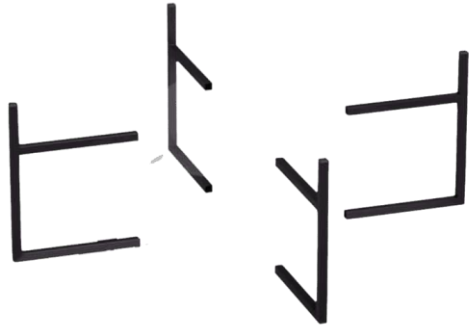

3 - Complete the tightening process with the help of a screwdriver.



5 - Align the tv unit bottom plate evenly.



2 - Place the TV unit side pillars.




4 - Place the TV unit front covers.



6 - To mount the legs, screw them to the bottom table of the cabinet.



7 - Perform the assembly of the feet.

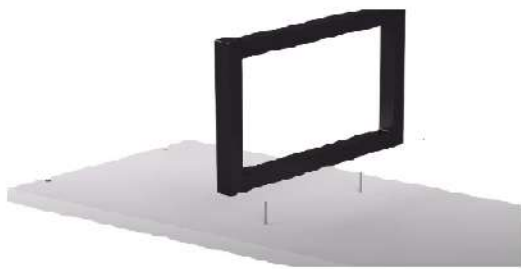

8 - The TV cabinet is almost finished!




9 - Align it under the side panels and start screwing them evenly.



10 - Align the back plate to nail it.



11 - Fix the back plate using a hammer.

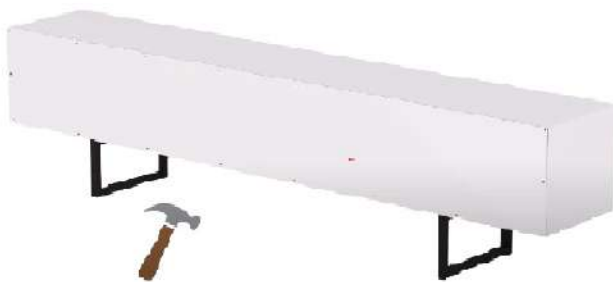

12 - Now it's time for the drawers. Screw the hinges onto the doors first.



13 - Now mount the hinges on the cabinet.



14 - Do not forget to pay attention to the adjustment of the hinges so that the drawers can be closed and opened properly and that there is no gap left when the cabinet is closed.




15 - Now it is time to install the upper shelves. We're almost done!




16 - Since the shelves will be fixed to the wall with a drill, do not forget to make the markings on the back plate.



17 - After the markings are completed, drill the wall with a drill.

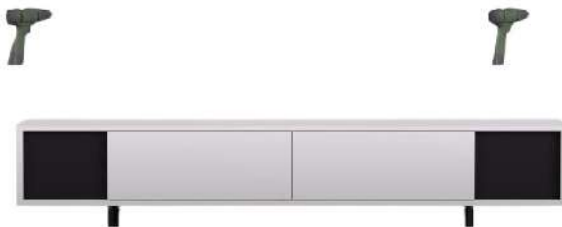


18 - Make sure that all parts of the shelves are complete.

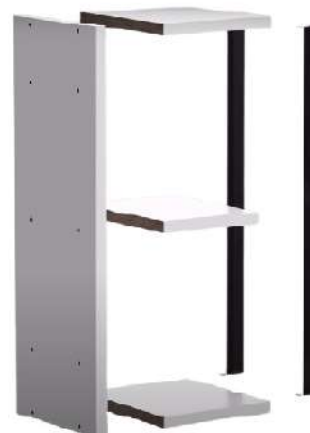

19 - Clamp and fix the shelves using screws.



20 - Fasten the iron parts from the inside.

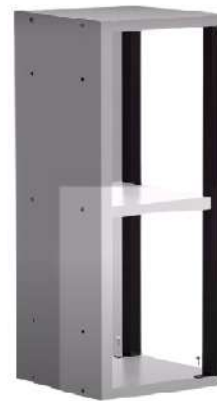

21 - Now mount the entire shelf on the wall.



22 - Voila! Our product is complete and ready to use!

