






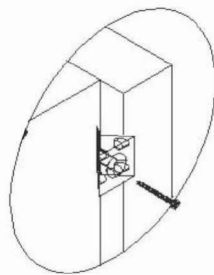
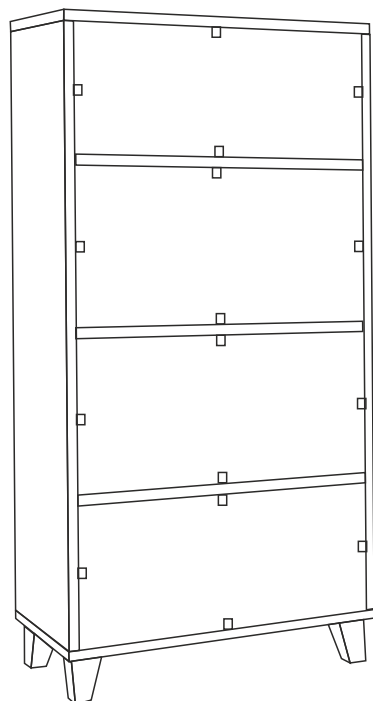
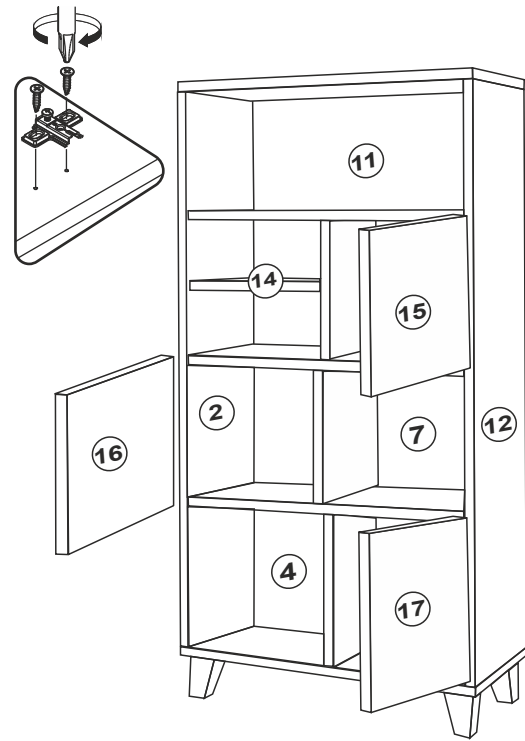
 MINIFIKS SHAFT x 32	 MINIFIKS HEAD x 32	 DOWEL : x 32	 PLASTIC PIN x 4
 SÜPER CAMEL HİNGE x 6	 CORNER WEDGE x 16	 WOODEN FOOT X 4	 4x18 CHİPBOARD SCREW x 52

* FIX THE ACCESSORIES AS SHOWN FOLLOW THE INSTALLATION SEQUENCE WHILE INSTALLING THE PRODUCT .



CORNER WEDGE

FLORA (BOOKSHELF) ASSEMBLY GUIDE



