

1


3

(ATTACH THE MIDFOOT
METAL PARTS)

(THE LEFT ARM IS INSIDE
THE ZIPPERED SECTION)

(THE RIGHT ARM IS INSIDE
THE ZIPPERED SECTION)

(ARM MOUNTING
HOLES)

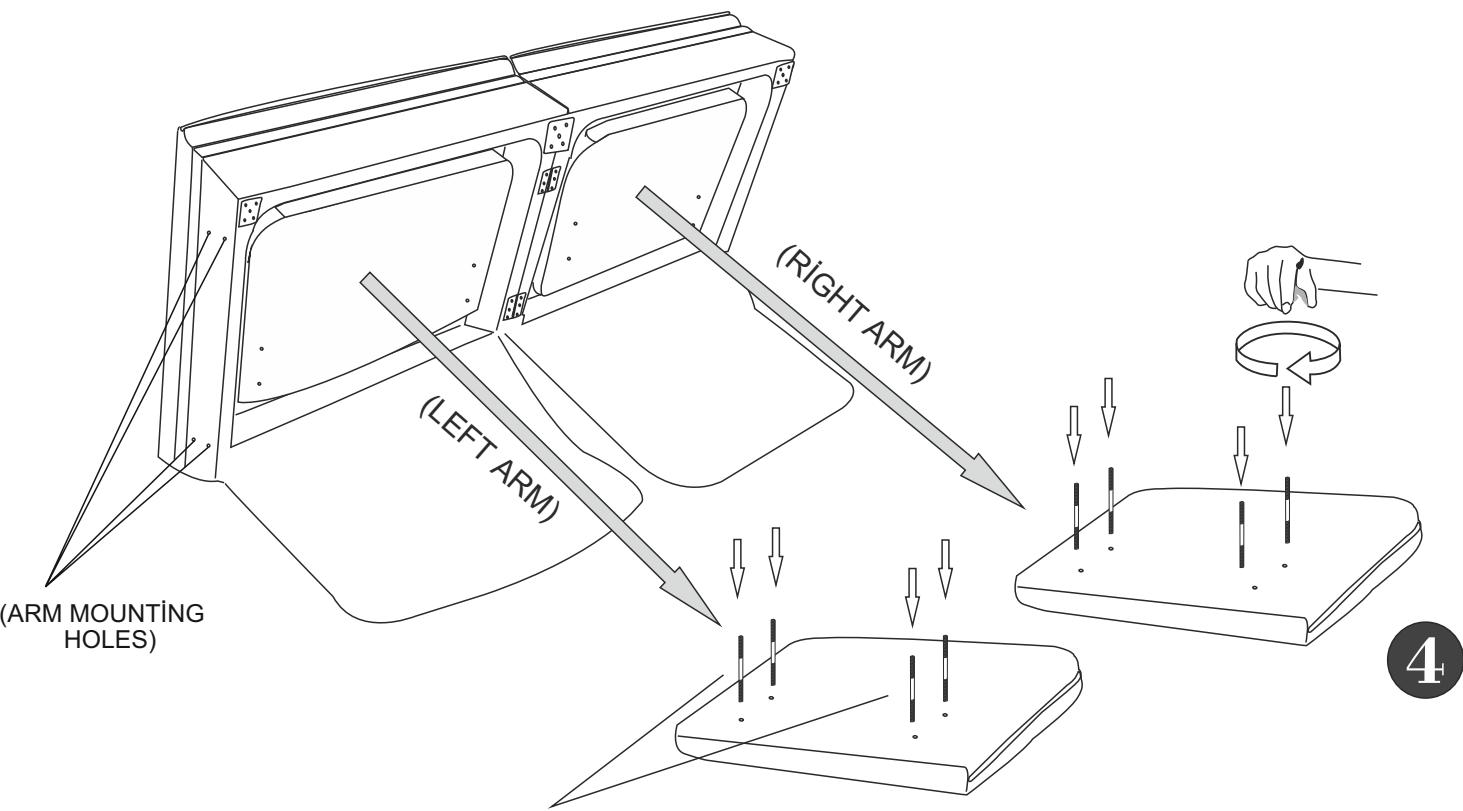

(TURN THE ARM CONNECTION SCREWS TO THE RIGHT AND LEFT ARM)

4

