

3.5*18 SCREW x 12



İRÖN X 4

WOODEN FOOT AYAK X 4





6*15 SCREW X 16

* FIX THE ACCESORIES AS SHOWN FOLLOW THE INSTALLATION SEQUENCE WHILE INSTALLING THE PRODUCT .

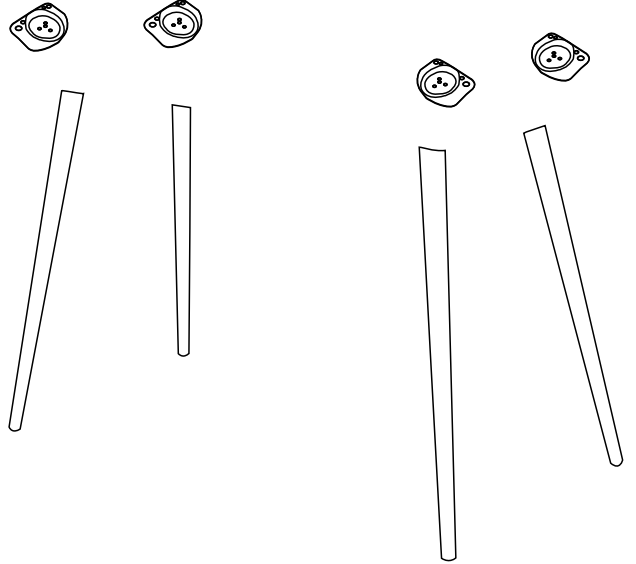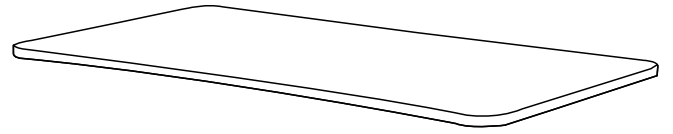

1

STUDY DESK, ASSEMBLY GUIDE

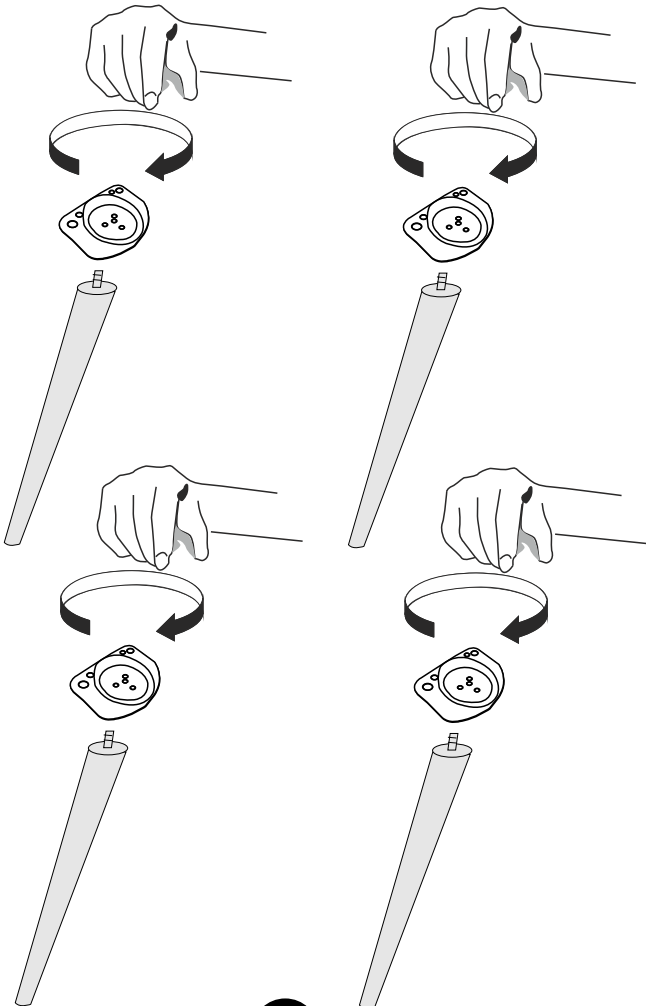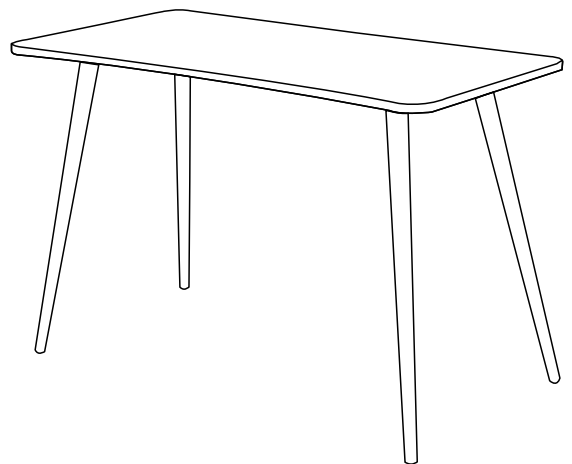

2

